


# andromeda 1-3000

Pool air intake is always on Front.  
Controls can be on left side, right side or back.  
Pipe connections can be on Left, Right, Front or Back.  
Supply air outlet can be on Base or Back.  
Fresh air can be on left side, right side or back.

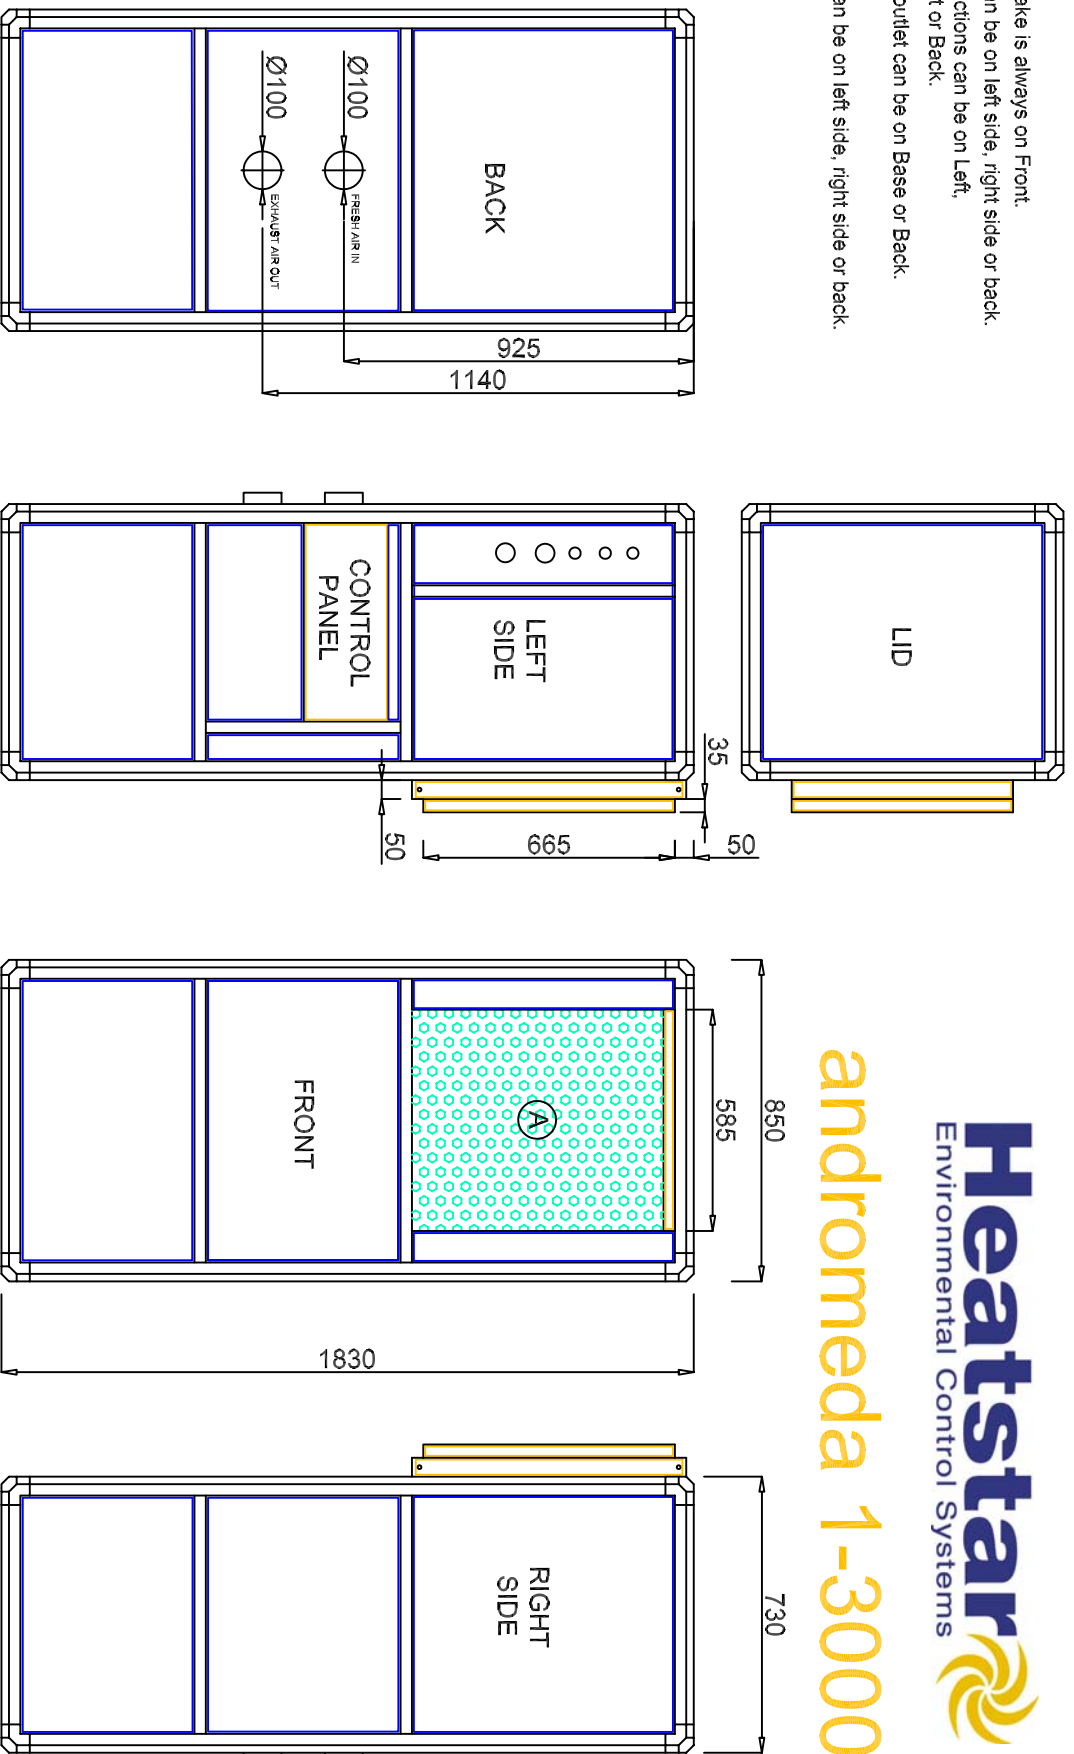

**A - Pool Air Intake**  
**B - Supply Air Outlet**

ILLUSTRATED ORIENTATION :

SUPPLY AIR OUTLET : BASE  
CONTROL PANEL : LEFT SIDE  
PIPE CONNECTIONS : LEFT SIDE  
FRESH AIR / EXHAUST PORTS : BACK