

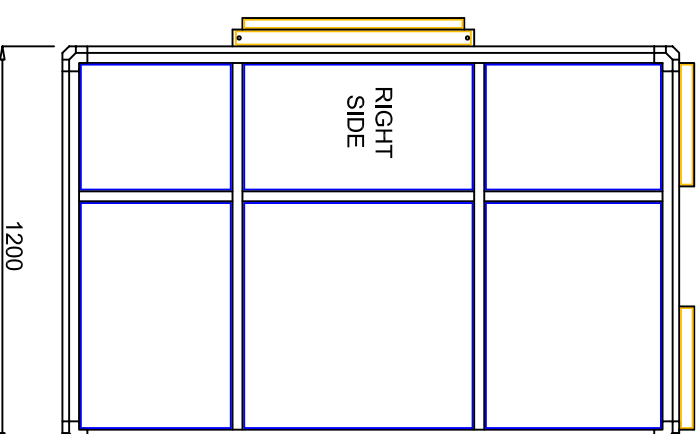
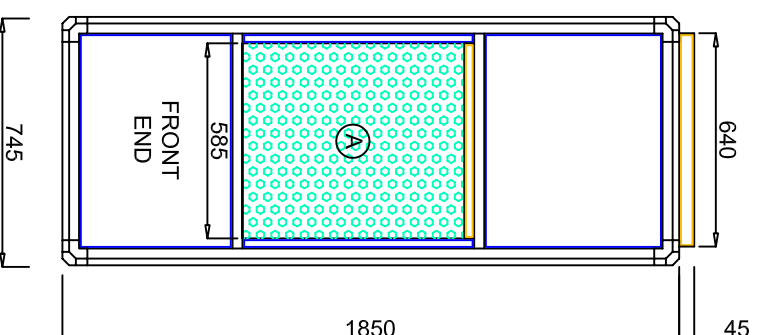
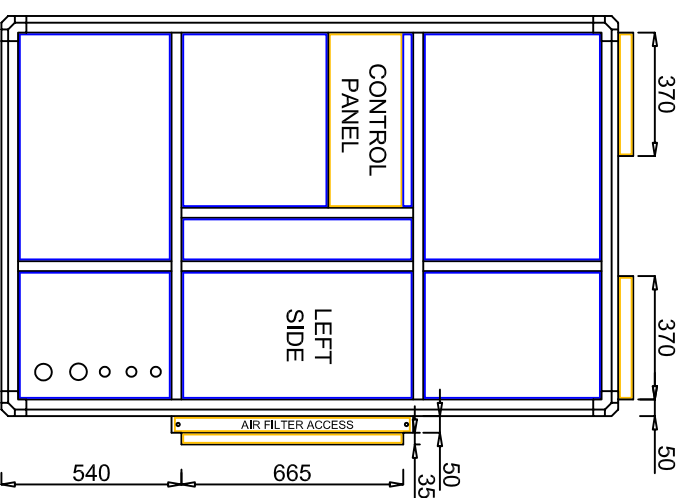


Pool air intake is always on Front end.
 Controls can be on left or right side.
 Pipe connections can be on Left, Right, Front or Back.
 Supply air outlet can be on Base, Back or Top.
 Fresh air intake can be on Top or Front.
 Exhaust air outlet can be on Top or Back*.
 * Not with Top supply air outlet.

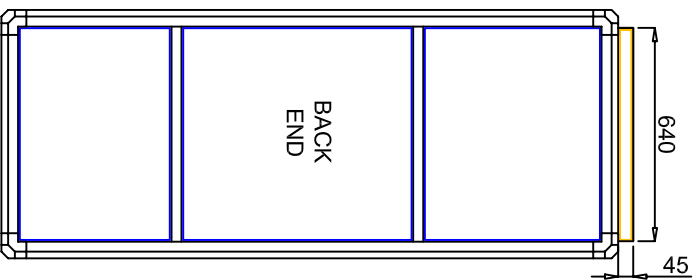

- A - Pool Air Intake
- B - Supply Air Outlet
- C - Fresh Air Intake
- D - Exhaust to Outside

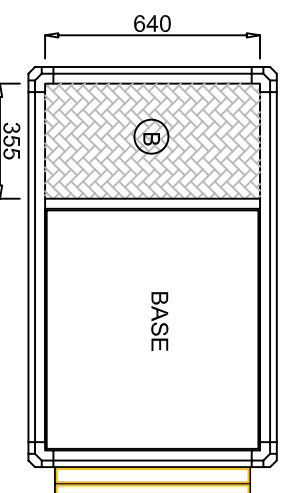

ILLUSTRATED ORIENTATION :
 SUPPLY AIR OUTLET : BASE
 FRESH AIR INTAKE : TOP
 EXHAUST AIR OUTLET : TOP
 CONTROL PANEL : LEFT SIDE
 PIPE CONNECTIONS : LEFT SIDE